INSTALLATION MANUAL
For
Eternity Basin with Pedestal

1.Tools(not included)

Screwdriver

Electric Drill

Silicon

Spanner

Spirit level

Tape measure

Pencil

2. Installation Procedure

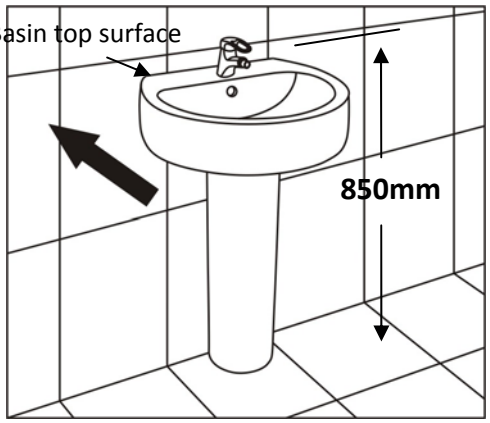

3-1 Place the Basin/Pedestal to right position in your bathroom. Mark the line of the height. Suggested 850MM as the total height from the basin top surface to the floor .

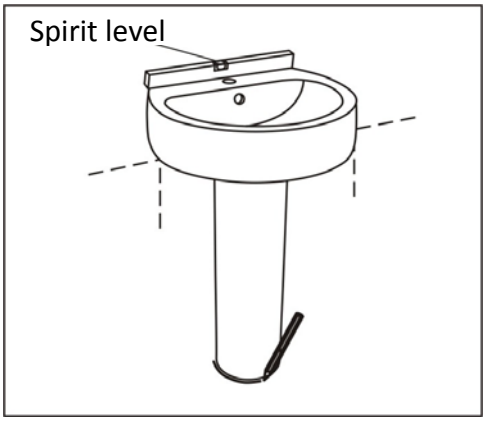

3-2 Make sure the basin is level by using a spirit level. Mark the line at the foot of the pedestal.

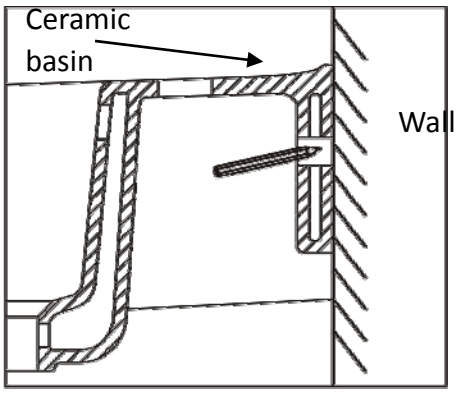

3-3 Mark the installation position on the wall through the basin installation hole.

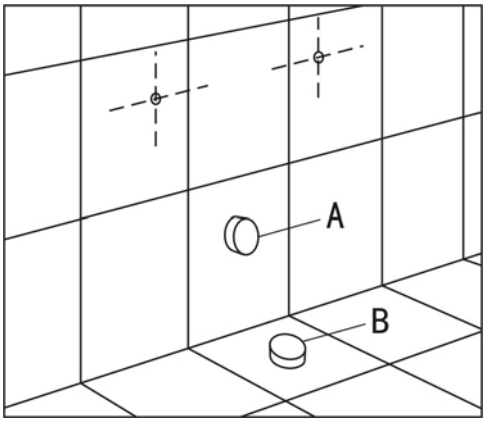

3-4 Drill holes at the marked position. (Remark: A-outlet to wall; B-outlet to floor)**NOTE**

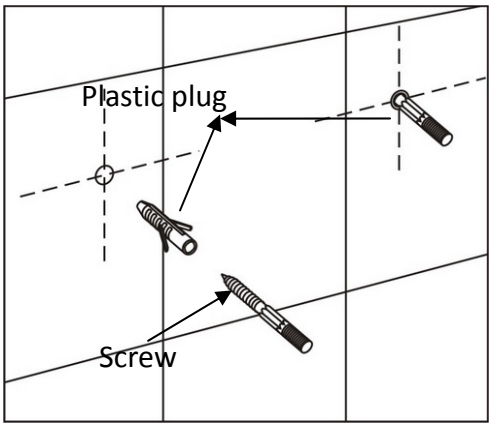

3-5 Install the plastic plug and tighten the screws. (Not included)(please select correct fitting for your type of wall)

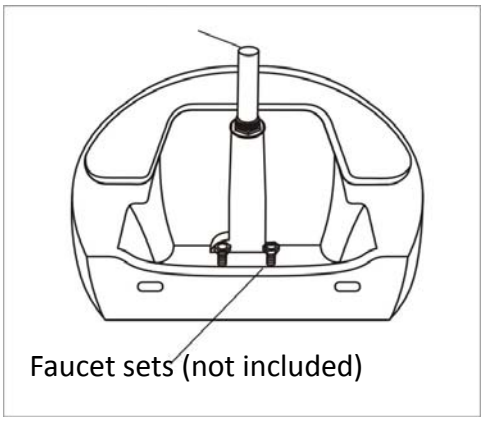

3-6 Install the faucet sets and flushing fittings as per the separate installation manual. (Not included)

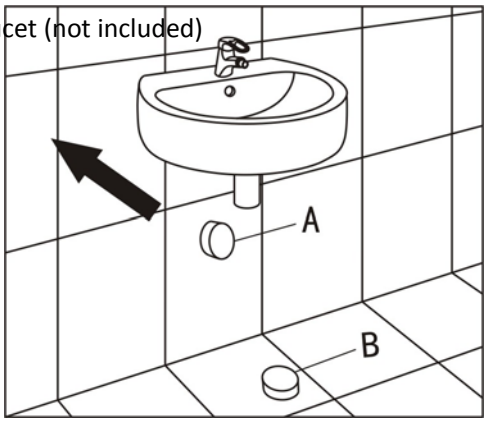

3-7 Put the basin up on the plug and fixed by installation sets. Choose the right flushing fitting sets based on your bathroom outlet way: A-to the wall; B-to the floor. (Not included)

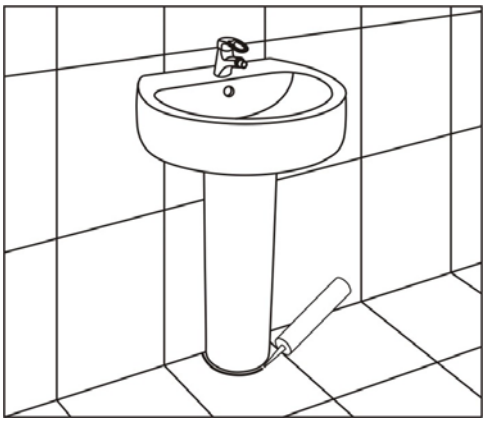

3-8 Install the inlet and outlet fittings(Not included). Seal the edge of basin backwards/wall and Pedestal/Floor Using the silicon

4. Cleaning Your Basin

For best result, keep the following in mind when caring for your products

4-1 Use a mild detergent such as liquid dishwashing soap and warm water for cleaning. Do not use abrasive cleaners that may scratch or dull the surface.

4-2 carefully read the cleaner product label to ensure the cleaner is safe for use on the material.

4-3 Wipe surface and rinse completely after cleaner application .Rinse and dry any overspray that lands on nearby surfaces.

4-4 Use a soft, dampened sponge or cloth, never use an abrasive material such as a brush or scouring pad to clean.

****NOTE** Please ensure when drilling that the area to be drilled is clear from hidden wires, pipes or anything else that may cause a problem if drilled into.**

INSTALLATION MANUAL
For
Eternity Basin with Pedestal

1.Tools(not included)

Screwdriver

Electric Drill

Silicon

Spanner

Spirit level

Tape measure

Pencil

2. Installation Procedure

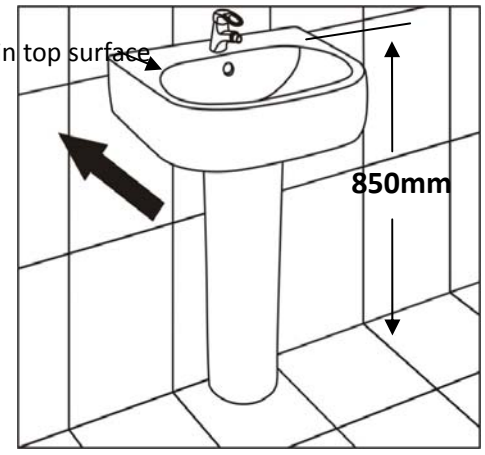

3-1 Place the Basin/Pedestal to right position in your bathroom. Mark the line of the height. Suggested 850MM as the total height from the basin top surface to the floor .

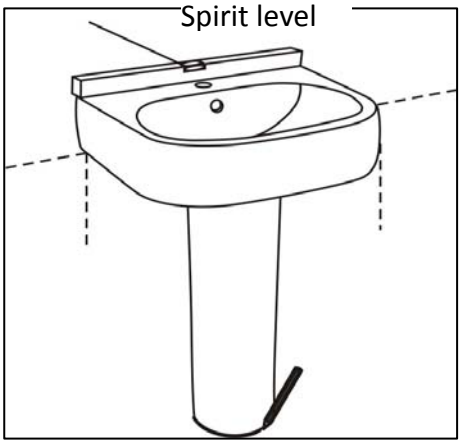

3-2 Make sure the basin is level by using a spirit level. Mark the line at the foot of the pedestal.

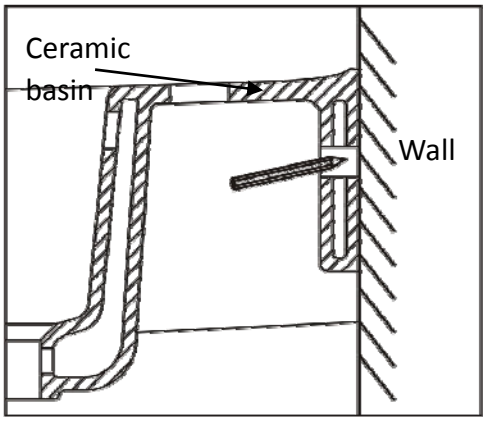

3-3 Mark the installation position on the wall through the basin installation hole.

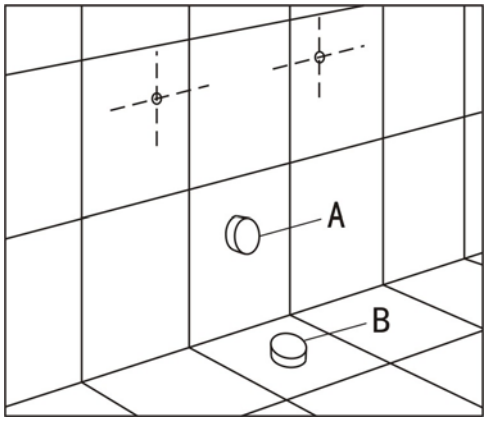

3-4 Drill holes at the marked position. (Remark: A-outlet to wall; B-outlet to floor)**NOTE**

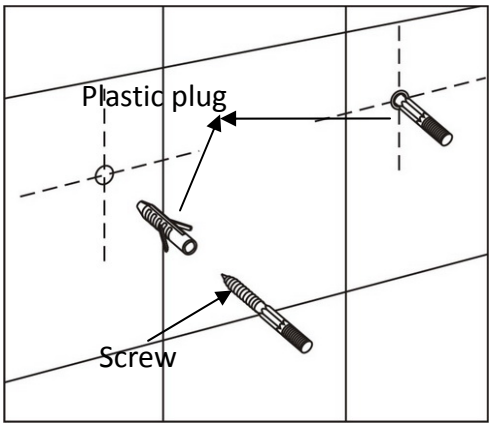

3-5 Install the plastic plug and tighten the screws. (Not included)(please select correct fitting for your type of wall)

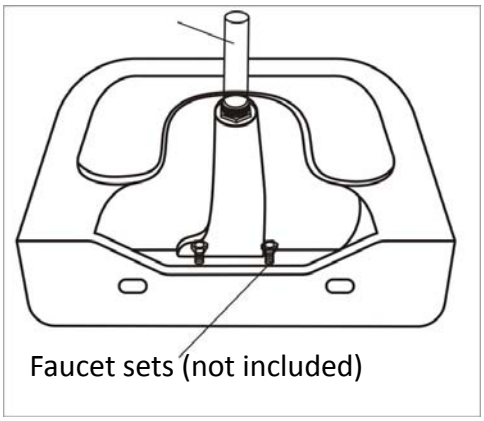

3-6 Install the faucet sets and flushing fittings as per the separate installation manual. (Not included)

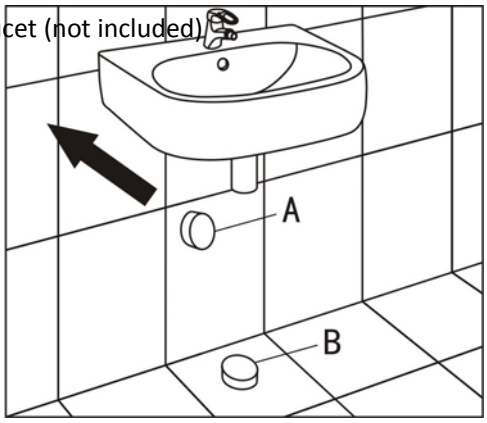

3-7 Put the basin up on the plug and fixed by installation sets. Choose the right flushing fitting sets based on your bathroom outlet way: A-to the wall; B-to the floor. (Not included)

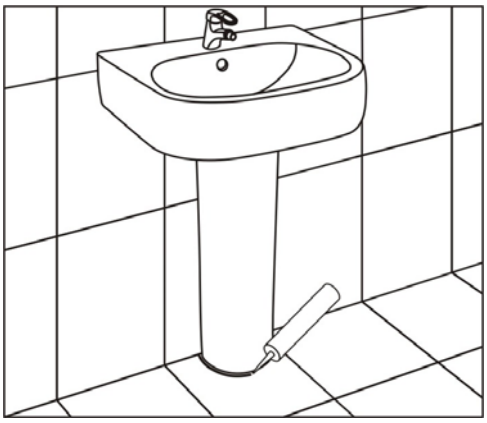

3-8 Install the inlet and outlet fittings(Not included). Seal the edge of basin backwards/wall and Pedestal/Floor Using the silicon

4. Cleaning Your Basin

For best result, keep the following in mind when caring for your products

4-1 Use a mild detergent such as liquid dishwashing soap and warm water for cleaning. Do not use abrasive cleaners that may scratch or dull the surface.

4-2 carefully read the cleaner product label to ensure the cleaner is safe for use on the material.

4-3 Wipe surface and rinse completely after cleaner application .Rinse and dry any overspray that lands on nearby surfaces.

4-4 Use a soft, dampened sponge or cloth, never use an abrasive material such as a brush or scouring pad to clean.

****NOTE** Please ensure when drilling that the area to be drilled is clear from hidden wires, pipes or anything else that may cause a problem if drilled into.**